

# USB Quick Start

## Plug cable in & use drivers included on CD.

1. The Windows “Detect New Hardware Wizard” will start
2. Choose “**Install from a List or a specific location**”. Press “Next”
3. Choose “Search for the best driver in these locations.”
4. Choose “Include this location in the search.” (Note: The default location is C:\Program Files\Metrologic Instruments\Optimus\USB Driver). -> Press “Next” (see Figure 1)
5. Press “Continue Anyway” at the “Hardware Installation Logo Testing warning”
6. Press Finish
7. The installer will run twice (Repeat steps 1-6).

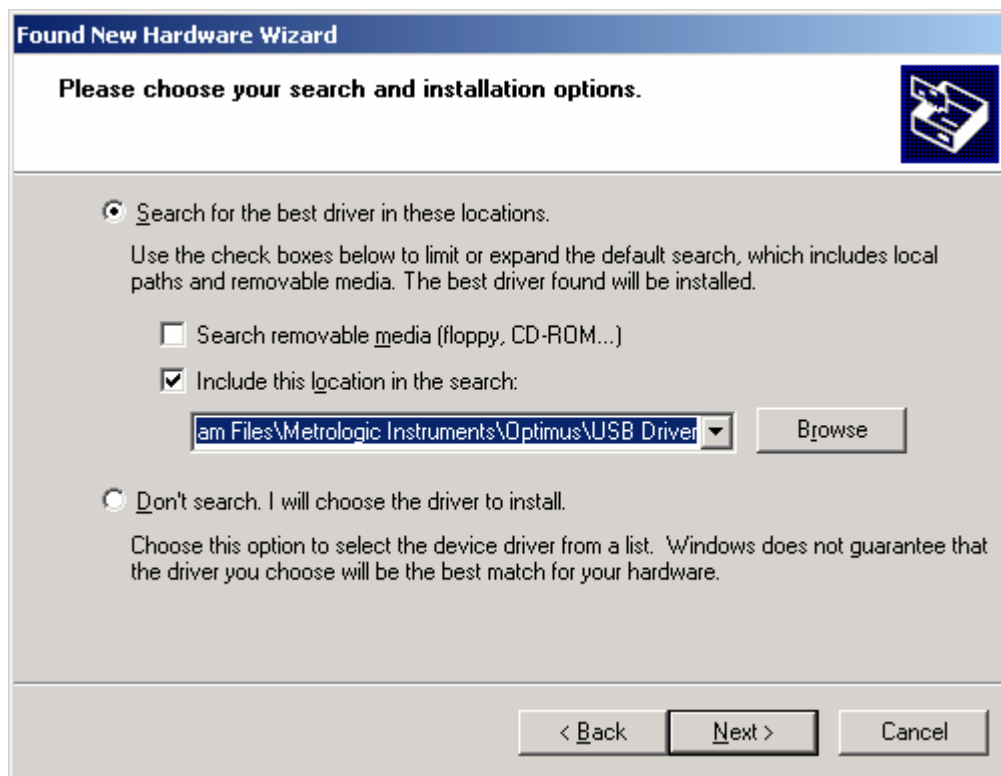


Figure 1

## Setup Data read.exe & check the COM port settings the USB cable installed.

1. Open ‘Device Manager’. Go to “Ports (COM & LPT). -> Shows up as a COM port (next avail #)
2. Change COM port on Data Read.exe to COM port in Device Manager
3. Use Cradle-IR (a.k.a. Serial-IR) as the communication settings on both the Optimus and in the application.